

SAFETY INSTRUCTIONS WHEN USING THE CLOP LIFEPO4 BATTERY



General
warnings

No need to charge for 12 hours - if the battery of the cleaning machine has been charged (the red LED on the charger flashes), disconnect the battery from the charger.

When charging is in progress, the display built into the machine flashes continuously.

Disconnect the battery from the charger and connect it to the machine at the end of the charging process.



Read the
instructions for use

If the battery charge level drops to 10 percent, start charging immediately. The built-in electronics of the battery disable the operation of the machine below a 5 percent charge level to prevent damage to the battery.

Do not damage the outer casing of the batteries. Do not disassemble or cut the battery as this involves a risk of fire and explosion.

Do not expose the battery to direct radiant heat. The battery temperature must not exceed 60°C.

The discharge current must not exceed the value indicated on the battery.



Flammable

SAFETY INSTRUCTIONS FOR CHARGING THE BATTERIES

These warnings and safety information are especially important and need to be followed for optimal safety.

Otherwise, the battery and the charger may be damaged and, in the worst case, cause fire.

The LiFeP04 battery in the cleaning machine can only be used with its own charger. It is forbidden to use a charger intended for another machine. This involves a risk of fire and explosion!

The battery has a built-in electronic protection (BMS) that can disable the operation of the battery to prevent overcharging and over-drainage. In this case, call the technical info helpline.

Batteries and chargers must not come into contact with water or moisture.

In the event of a fire, do not use water as an extinguishing agent. Inform firefighters that the machine operates on a LiFeP04 battery.

Attention! Increased risk of fire and explosion!



Hazardous waste



Technical support line: CleanOpt Kft. +36707016690 www.clop.hu